

# COM2

## TELEPHONE FEATURES

### QUICK REFERENCE GUIDE

**Note:** Callers are automatically placed on hold whenever ELAN Phone Features are activated. Flash-hook or press any key (except "0") to return to the call.

#### WHOLE-HOUSE PAGE

#, **7** ("P" for Page)

Speak into your telephone handset to Page throughout the house over your system's speakers.



#### PHONE-TO-PHONE INTERCOM

#, **7** to page, then **0**

Talk with someone on any other house phone (on the same line) without the conversation being heard over your system's speakers.

#### DOOR STATION COMMUNICATIONS

#, **3** ("D" for Door)

Connects you to the ELAN Door Station whose doorbell button was last pressed. Up to four ELAN Door Stations can also be accessed individually by following (#, 3) with the Door Station number.

Door Station 1: #, **3**, **1** \_\_\_\_\_

Door Station 2: #, **3**, **2** \_\_\_\_\_

Door Station 3: #, **3**, **3** \_\_\_\_\_

Door Station 4: #, **3**, **4** \_\_\_\_\_

#### DOOR LATCH ACTIVATION (Optional)

#, **3**, **0**

Activates the electronic door latch relay. Individual door latch relays can be activated by following the Door Station number with a "0". (see above)

#### HOLD

#, **4** ("H" for Hold)

Allows you to place a caller on HOLD (with music), hang up, and take the call on another house phone. Press any key to return to the call.

#### MUSIC MUTE

#, **6** ("M" for Mute)

Mutes the music coming through your system's speakers until you hang up the phone.

## RELAY ACTIVATION

#, 1, (1-4)

Activate up to four relay-controlled devices from your telephones.

Relay 1: #, 1, 1 \_\_\_\_\_

Relay 2: #, 1, 2 \_\_\_\_\_

Relay 3: #, 1, 3 \_\_\_\_\_

Relay 4: #, 1, 4 \_\_\_\_\_

## SYSTEM BYPASS

#, 9

Allows you to use outside phone services that require use of the # key.



## ADDITIONAL FEATURES

### DOOR CHIME SELECT/CHANGE

You may customize the Door Chime for each ELAN Door Station. Ten digitally-sampled Door Chimes are available:

- |                                    |                       |
|------------------------------------|-----------------------|
| 01 – 3-note bells (Door 1 default) | 06 – Fog horn         |
| 02 – 4-note bells (Door 2 default) | 07 – Mean dog barking |
| 03 – 3-note bells (Door 3 default) | 08 – Sleigh bells     |
| 04 – 2-note bells (Door 4 default) | 09 – Ping             |
| 05 – “Ding-Dong”                   | 10 – Sonar blip       |

To change the Door Chime press:

#, 2, 0 followed by the Door Station number (1-4), then the Chime number (01-10)

### TELEMUTE

Music mutes for the duration of a telephone ring or door chime.

### ON-HOLD ALERT

A single “beep” will be broadcast through your system’s speakers if a caller has been left on HOLD for more than 1 minute.

To enable the Line 1 On-Hold Alert, press #, 3, 3, 1, 1.

To disable the Line 1 On-Hold Alert, press #, 3, 3, 1, 0.

To enable the Line 2 On-Hold Alert, press #, 3, 3, 2, 1.

To disable the Line 2 On-Hold Alert, press #, 3, 3, 2, 0.

### OFF-HOOK ALERT

A double “beep” will be broadcast through your system’s speakers if a phone is left off the hook for more than 2 minutes.

To enable the Line 1 Off-Hook Alert, press #, 3, 3, 1, 1.

To disable the Line 1 Off-Hook Alert, press #, 3, 3, 1, 0.

To enable the Line 2 Off-Hook Alert, press #, 3, 3, 2, 1.

To disable the Line 2 Off-Hook Alert, press #, 3, 3, 2, 0.

*ELAN phone features may be programmed to your telephone’s Speed Dial buttons for 1-button activation.*

*ELAN phone features may also be initiated by using your telephone’s \* key instead of #. Confirm with your ELAN installer which key has been programmed for your system.*

**ELAN**

www.elanhomesystems.com