

Living Room Theater

USER INTERFACE



To Start an Activity – (Remote Thinks All Equipment Is Off – READ LCD SCREEN!) [If not, use help button.]

1. Load your CD or DVD media into the DVD player if necessary.
2. Press Activities Button. Now press an Activity button in the LCD screen to begin. (Buttons next to LCD screen).
3. The options shown on the LCD screen and remote's buttons now control devices used for the activity you have chosen.
Example; If you chose “Watch a DVD”, the remote's LCD screen will show options for controlling the DVD player and the stop/play/rewind/menu buttons will control the DVD player. You may press the “Next” button on the remote to see more DVD commands for the current Watch DVD activity.
4. **Devices:** For independent control of any system component, you can display the list of components on your system by pressing the “Device” button. The LCD screen on the remote will now show a list of all your components. To control the Television, press the white “select” button on the side of the LCD screen for the line item that reads “TV” or “Television”. The LCD screen will now show a list of commands for controlling the Television. Use the “next” button for more commands specific to the device chosen and use the white “select” buttons to send the respective infrared command from your remote to your device.

RESET PROCEDURE: (You Tried Help Button First!)

1. Hit “Off” on remote.
2. Manually turn off all components such as Surround Receiver, DVD player, Television and Cable Box.
 Note: All devices should now be off as the remote thinks they are. This is called syncing back to the off state.

Still Having Problems?

- Unplug the power from your cable box or satellite receiver for 30 seconds.
- OR turn the power button on your main power strip off for 30 seconds and back on.