

AeGIS 9000 Series QUICK REFERENCE GUIDE

LOCAL PROGRAMMING

- 1) PRESS 0 AND # SIMULTANEOUSLY THEN RELEASE**, the display screen stops scrolling (If the display screen is still scrolling repeat this step again) then enter the valid 4-digit Master Code (default Master Code: 0000). Now, you are in programming mode and see table below to continue.
- 2) IF YOU DO NOT HAVE A VALID MASTER CODE**, open the panel (key must be used) then press and release the "RED BUTTON" on the board and the display shows: **x x x x: 4-digit Master Code**, then press #. Now, you are in programming mode and see table below to continue.

SYSTEM'S OPERATION

TO PLACE A CALL FROM THE AeGIS 9000 Series: • Press 3 to scroll the tenant name from A to Z. or Press 6 to scroll the tenant name from Z to A, then press #.

TO PLACE A DIRECT CALL: Press # , wait for a dial tone then press the 2, 3 or 4 digit directory number.

TO GRANT ACCESS TO VISITOR: Press 9 or 8, can be programmed on Function Code 43

TO USE THE 4-DIGIT ACCESS CODE: Press * then the 4-digit code.

TO USE THE PROXIMITY WIEGAND CARD READER: Place the card on the red LED, if the card is valid door will open.

TO USE THE CARD AND THE KEYPAD ACCESS CODE: Place the card on the red LED then press the 4-digit keypad access code.

TO EXTEND THE TALK TIME: Tenant must press the # after the time-out warning beep, the talk time will be extended to another cycle.

TO CALL INTO THE AeGIS 9000 Series: Dial the AeGIS phone number, you hear "ONE SHORT BEEP" if you are connected then press * to communicate with the visitor and press 9 or to unlock the door. This feature is not applicable if multi-systems are connected on the same phone line.

KEYPAD LAYOUT

See manual for more detail



FUNCTION CODE TABLE

CODE	DESCRIPTION	CODE	DESCRIPTION
*	Exit the programming (local programming) or clear the existing field	19	Reinitialize Holiday Schedules
#	To accept program.	20	New Tenant Code (Directory Code)
00	Replace System Master Code.	21	Modify Tenant Code (Directory Code)
01	Change Talk Time	22	Delete a Tenant Code (Directory Code)
02	Open Interval Relay 1 and relay 2	23	Clear All Tenants
03	Lock-out Count	24	Card and Code
04	Tone or Pulse	26	Facility Code
05	Single or Multi Systems	27	RS-232 or Modem
06	System ID	28	Directory Digit
07	Remote Enable or disable	29	Alarm Delay
08	Relay 2 Mode	30	Add Keypad Access Code and Card Number
09	Alarm Telephone Number	31	Modify Keypad Access Code and Card Number
10	Manual Unlock/Lock or Unlock hold doors timer	32	Delete Keypad Access Code and Card Number
11	Edit Welcome Screen Display	33	Clear All Keypad Access Codes and Card
12	Set Time and Date	40	Master Code Mask
13	Time Zones	41	Open Door Beep
14	Holiday Schedules	42	Enable or Disable PBX
15	Auto Unlock Schedules	43	Open Door 1 and Door 2 Number
16	Reinitialize Time Zone Schedules	46	Display System Information
17	Reinitialize Auto Unlock Schedules	50	Clear the EEPROM Memory to Factory Default
18	Reinitialize Holiday Schedules	78	View Directory by Name